

Inklusive:  
Including:

Blenden-Set für Taster:  
**Lens-Set** for button:

- 2x weiss / white
- 1x blau / blue
- 1x gelb / yellow
- 1x grün / green
- 1x rot / red




**Schrauben:**


- Screw:**
- 6x 3x10
  - 1x 2,5x10

	Produktversion Product version	Verbindungskabel inklusive Connection cable included	Türanschlag Door hinge	S1	S2	S3
<b>MGB-A-COVER-R-L2-116115</b>	bis/ up to V 1.2.3	-	R	-	Taster beleuchtet	Taster beleuchtet
<b>MGB-A-COVER-R-L2-122026</b>	ab / from bis / up to V 3.0.3	X				
<b>MGB-A-COVER-R-L2-165362</b>	ab / from V 4.0.0	-	R	-	Button illuminated	Button illuminated
<b>MGB-A-COVER-L-L2-165363</b>	ab / from V 4.0.0	-	L			
<b>MGB-A-COVER-R-L1-119995</b>	bis/ up to V 1.2.3	-	R	Taster beleuchtet	Taster beleuchtet	-
<b>MGB-A-COVER-R-L1-122443</b>	ab / from bis / up to V 3.0.3	X				
<b>MGB-A-COVER-R-L1-168956</b>	ab / from V 4.0.0	-				


...-R-...

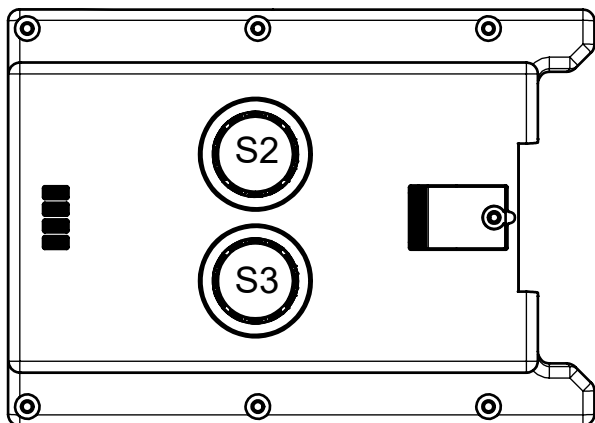

...-L-...

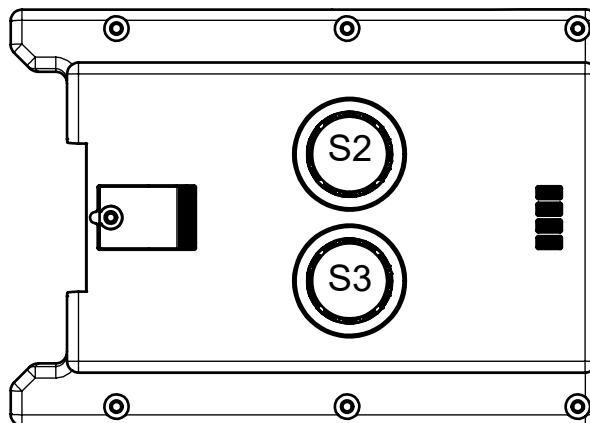

...-R-...

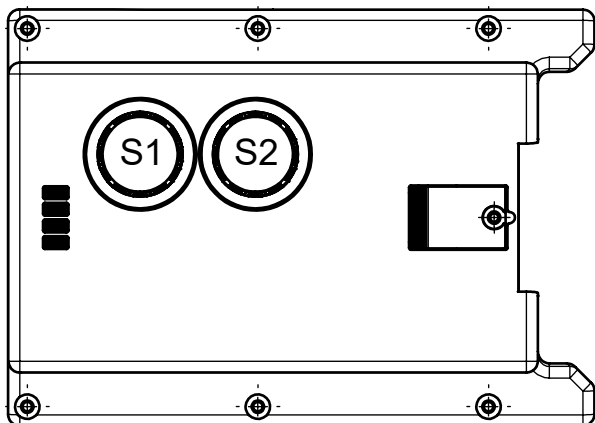


Belegung  
Deckeltaster:

PIN assignment  
top cover button:

Bis / up to  
V 1.2.3

ab / from  
V 2.0.0

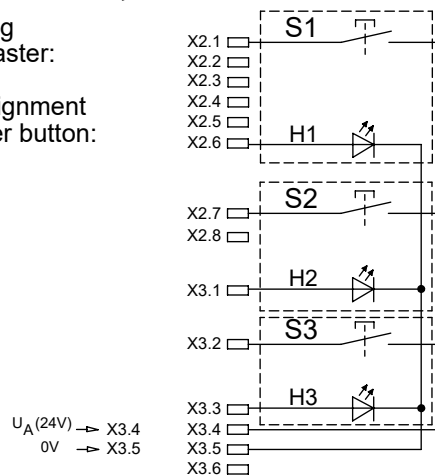

Maße in mm / Dimensions in mm  
© EUCHNER GmbH + Co. KG  
Technische Änderungen vorbehalten, alle Angaben ohne Gewähr / Subject to technical modifications; no responsibility is accepted for the accuracy of this information.