

Product Data


i ioduct Dutu					
Electrical Data					
	DC		AC		
	Transmitter	Receiver	Transmitter	Receiver	
Supply Voltage	10-30 V dc		20-250 V ac		
Voltage ripple	+/- 15%		-		
Reverse polarity protected	Yes		-		
Short circuit protected	-	Yes		-	
Current consumption	15 mA	5 mA	3 mA	2 mA	
Max. output load	-	120 mA/30 V dc	-	200 mA	


Environmental Data		
Temperature, operation		-20 to +60 °C
Sealing class		IP 67
Approvals	ac	FR (& &7
	dc	ĽK (€

Available Mo	dels				
	Model	Supply Voltage	Output	Output Mode	Sensing Range
	SMT 8000	10-30 V dc	-	-	20 m
Transmitter	SMT 8600	20-250 V ac	-	-	7 m
	SMT8600H	20-250 V ac	-	-	20 m (*)
Receiver	SMR 8400	10-30 V dc	NPN	Light/dark	0-7 m,
	SMR 8500		PNP	Light/dark	adjustable
	SMR 8420		NPN	Light/dark	0-20 m,
	SMR 8520		PNP	Light/dark	adjustable
	SMR 8800	20-250 V ac	SCR	Light/dark	7 m fixed
	SMR8820	20-250 V ac	SCR	Light/dark	20 m fixed (*)


(*) Used together


Illustration



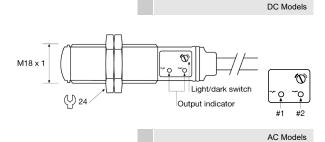

Connection

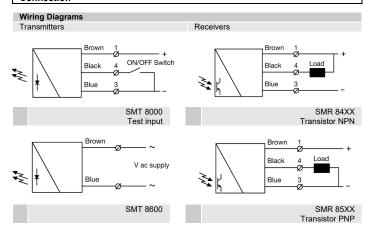



WARNING: DO NOT CONNECT THE SMR WITHOUT A SERIAL LOAD

Warning This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the selfchecking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.

SCR

Connection Wires/Pins Cable 3 pin, M8 plug 4 pin, M12 plug AC supply Blue & Brown Pin 1 Supply + Brown Pin 1 Supply -Blue Pin 3 Pin 3 Control/Output Black Pin 4 Sensor plug Sensor plug

Mounting & Alignment

Moun	ting & Alignment
1	Mount the transmitter and receiver sensors facing each other. Make sure the distance between the sensors does not exceed the specified sensing range of the system.
2	Align the sensors by moving, either the transmitter or receiver sensor, horizontally and vertically until the output is: - Deactivated when no object is present. (Dark operated) - Activated when no object is present. (Light operated)
3	Fasten the transmitter and receiver sensors securely using the enclosed locking nuts and/or a mounting bracket. Avoid acute angles on cable close to sensor.

Adjustments

Out	out N	/lode	Sel	ecti	on

The output mode can be selected via an integral switch on the receiver sensor. Refer to Output Logic table for output mode reference.

Light Operated (N.C.)	Enables the output to be inactive when there is an object present.	Turn potentiometer to full clockwise position	
Dark Operated (N.O.)	Enables the output to be active when there is an object present.	Turn potentiometer full counter clockwise position	

Output Logic					
	Output Mode	Output	Yellow LED		
Detection			DC models	AC models	
	Sta		DC IIIodeis	#1	#2
Object absent	Dark operated (N.O.)	Open	Off	On	Off
,	Dark operated (N.O.)	Open	Oli	OII	Oli
Transmitter Receiver	Limbt an avata d (NLC.)	Closed	On	Off	On
	Light operated (N.C.)	Ciosea	On	Oli	On
Object present	Linkton and d (N.O.)	0	0#	On	Off
	Light operated (N.C.)	Open	Off	On	Off
Transmitter Receiver		- ·	_	- "	_
Transmitter Transmitter	Dark operated (N.O.)	Closed	On	Off	On

Sensitivity Adjustment

DC models only

Maximum sensitivity can be used for most applications and is advised for applications with contaminated environments. Increase the sensitivity to maximum by turning the potentiometer, on the receiver sensor, to full clockwise position

Sensitivity adjustment may be required in applications where objects to be detected are small or translucent. Proceed with the following steps:

1	Start with the sensitivity at maximum by turning the potentiometer to full clockwise position.
2	Select target object with smallest dimensions and most translucent surface.
3	Place target object between transmitter and receiver sensors.
4	Decrease the sensitivity by turning the potentiometer counter clockwise until the output changes.
5	Remove target object. Check output status has changed.

The transmitter can be externally disabled and enabled, via the control wire, for test purposes. The test input requires the control wire to be connected to – (negative) supply wire. Make sure no object is present in the detection area when transmitter is disabled for test. When the transmitter is disabled, the receiver should change output.

Enable transmitter	Open (off) control switch (connected to + , or not connected)
Disable transmitter	Close (on) control switch (connected to -)

Note: If the test input is not to be used, it is recommended to connect the control wire to + supply wire.

Telco A/S reserves the right to make changes without prior notice

Website: www.telcosensors.com E-Mail: info@telcosensors.com